



# URBAN ARROW

## Removal and assembly instruction kickstand

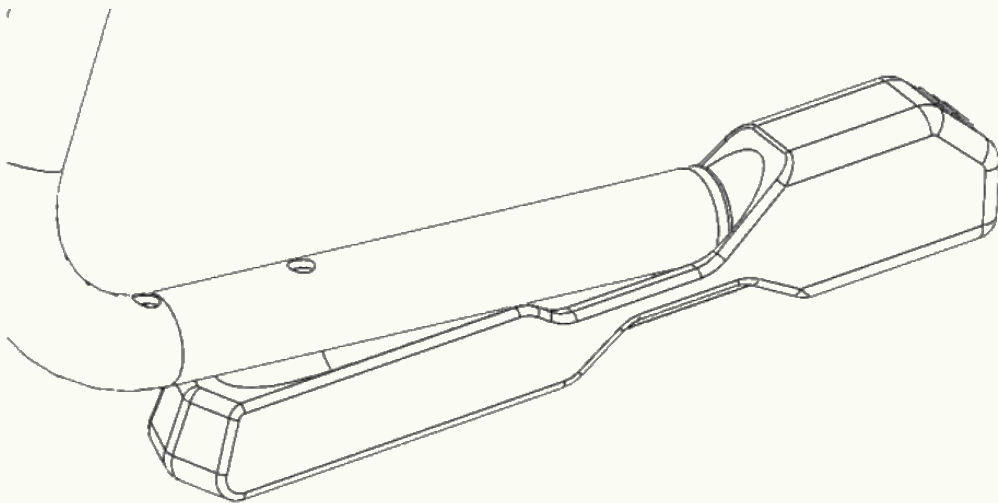


## Removal and Assembly instruction Kickstand

- 1) To assemble the new feet, first remove the below indicated old parts.

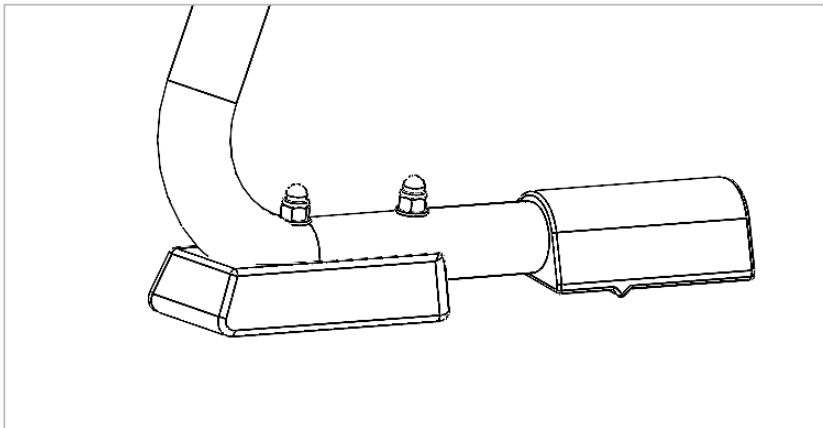

Starting position

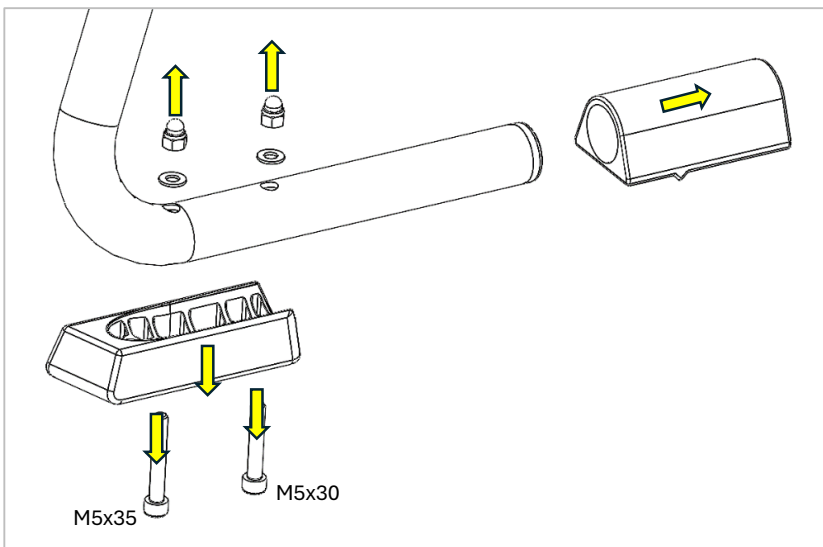

Remove all parts indicated with a yellow arrow.

*Note 1:*  
Keep the fasteners, they can be re-used

*Note2:*  
Front Bolt is longer, be aware when placing back


*Note1:*

*If the Kneeblocks that are removed from the Kickstand were fitted with additional Washers between the Tube and the Kneeblock, these Washers need to be placed back when fitting the new Feet.*


*Note2:*

*Kneeblocks from before 2021 are probably fitted with Button head bolts. These heads do not fit in the new feet. Replace these with Cylinder head bolts M5x30 and M5x35*


## 2) Assemble new Kickstand Feet

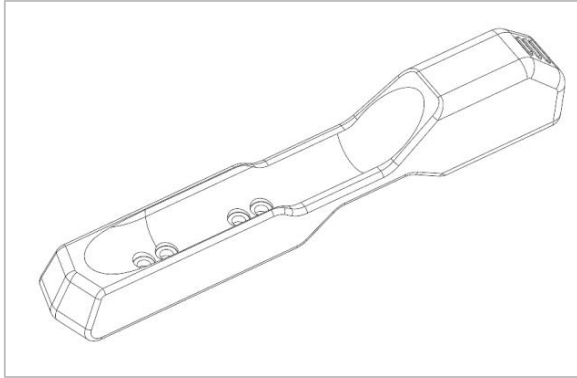


1 version for left and Right

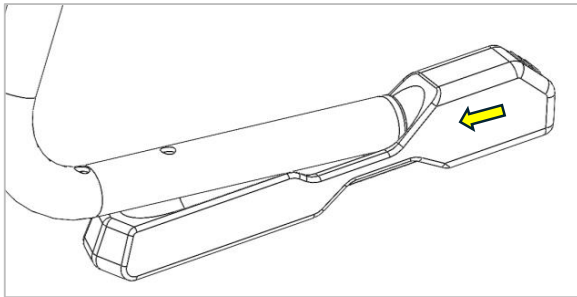

Slide new foot on

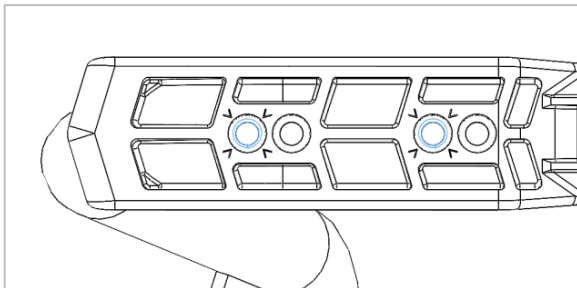

Foot is positioned correctly  
when Tube holes align with  
the holes in the feet that  
have a marking

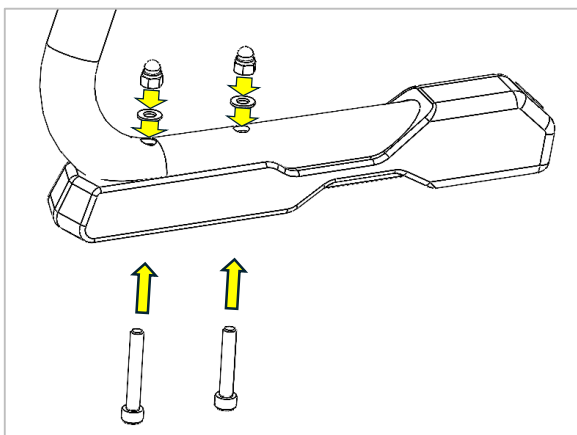

Re-apply fasteners